



OPERATING AND PARTS MANUAL

#1008172



DALTON (TOTE) MODEL 5 & 6 TON SPREADER

602 E. VAN BUREN – LENOX, IA. 50851
1-800-342-7498

daltonag@frontiernet.net
www.daltonagproducts.com

QUICK REFERENCE INDEX

ASSEMBLY - Recommended Procedures -----	4
PTO Drive -----	4
Spinner Guard -----	4
ADJUSTMENTS	
PTO Belt Tension -----	4
PTO Belt Replacement -----	5
Spinner Drive Belt - Dual & Single Spinners -----	5
Drag Chain Adjustment -----	6
Conveyor Drive Speed Changing -----	6
INITIAL OPERATION AND CHECK-OUT -----	7
SPREAD PATTERN ADJUSTMENTS -----	7
Dual Spinners -----	7-8
Setting Dual Spinners to Factory Specifications -----	8-9
Single Spinners (Speed, Spread Pattern) -----	10
BRAKES & HYDRAULIC SYSTEM -----	10
MAINTENANCE -----	13-14
SAFETY SUGGESTIONS -----	15

PART NUMBERS AND DRAWINGS

5 & 6 TON FINAL ASSMY. -----	16-17
5 & 6 TON AXLE ASSMY. -----	18
PTO SPINNER DRIVE DUAL SPINNER -----	19
GEARBOX ASSMY. "BEFORE" JANUARY 1, 2000 -----	20
GEARBOX ASSMY. "AFTER" JANUARY 1, 2000 -----	21
SINGLE SPINNER ASSEMBLY -----	22
DUAL SPINNER ASSEMBLY-----	23-24
3-SPEED CONVEYOR DRIVE -----	25-26
2-SPEED CONVEYOR DRIVE -----	27-28
CHAIN DRIVE - STAINLESS STEEL-----	29
SPREADER REAR VIEW-----	30
ACTUATOR -----	31-32
BRAKE ASSMY. -----	33
6 TON AXLE ASSMY -----	34
LIMITED WARRANTY -----	35

(4)

5-TON & 6-TON SPREADERS

ASSEMBLY - Recommended Procedures

With a few exceptions, your new fertilizer spreader was delivered assembled. To facilitate loading and to prevent damage in transit, the PTO Drive Assembly and the spinner Guard may not be assembled. Some final assembly procedures are needed.

PTO DRIVE

To assemble to PTO Drive, refer to parts drawing.

SPINNER GUARD

1. Locate spinner guard. It is taped to the rear of the spreader frame. Associated mounting hardware will be attached to the guard.
2. Remove mounting hardware. Position spinner guard against rear member of spreader frame with tubular portion to the top.
3. Fasten guard with bolts and plates provided.

ADJUSTMENTS

The following adjustments were preset at the factory. However, it is a good idea to visually check these items before operating directions are given here so that you can make these adjustments if they are necessary.

PTO BELT TENSION

Refer to PTO Spinner Drive drawing.

1. Remove rear shield (22).
2. Loosen bolt securing idler pulley to rear drive plate (28).
3. Take out belt slack by applying upward pressure. While holding pressure, retighten idler bolt.

